


Swing Motor Fuse Locations


GTR099 – Single swing gate kit

Fuse required – F5AL250V or F5L250V

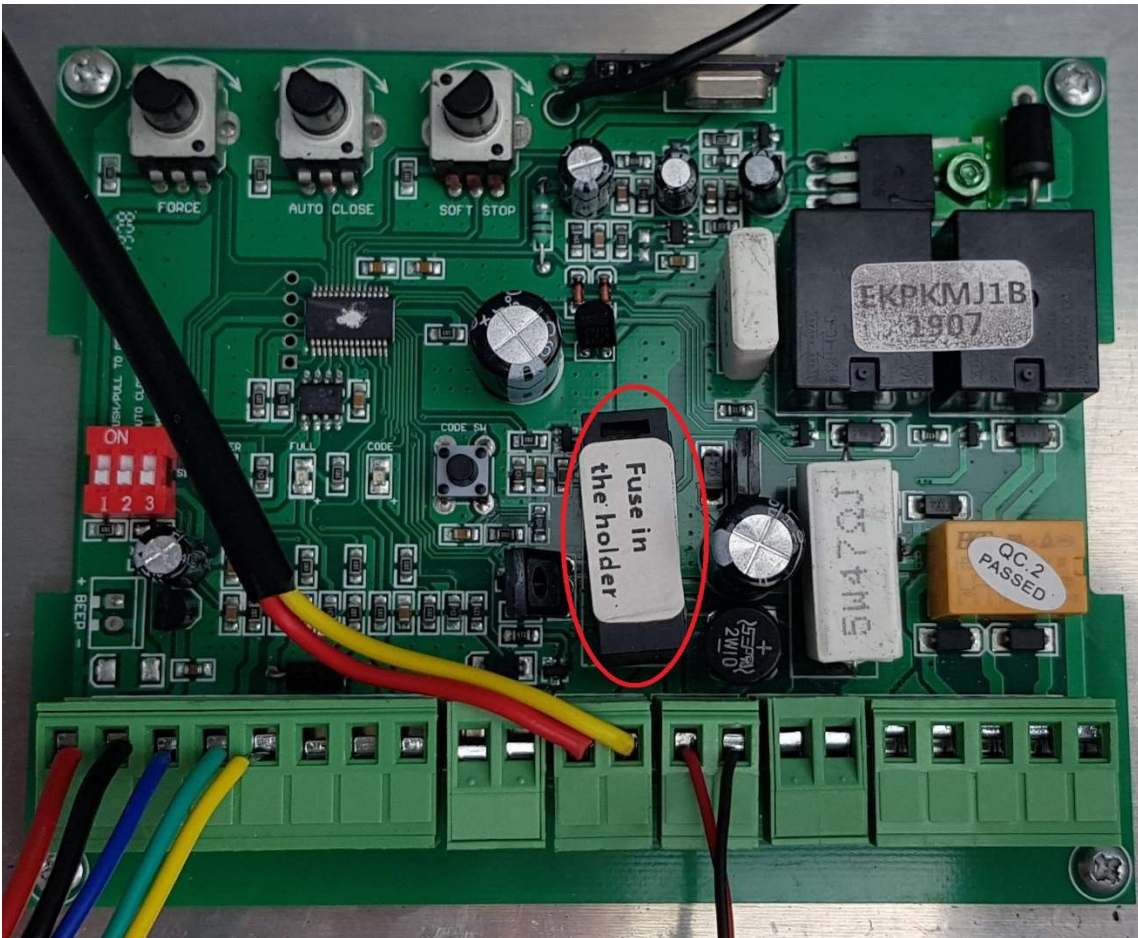

GTR058 – AC Double swing gate kit

Fuse required – F10AL250V or F10L250V

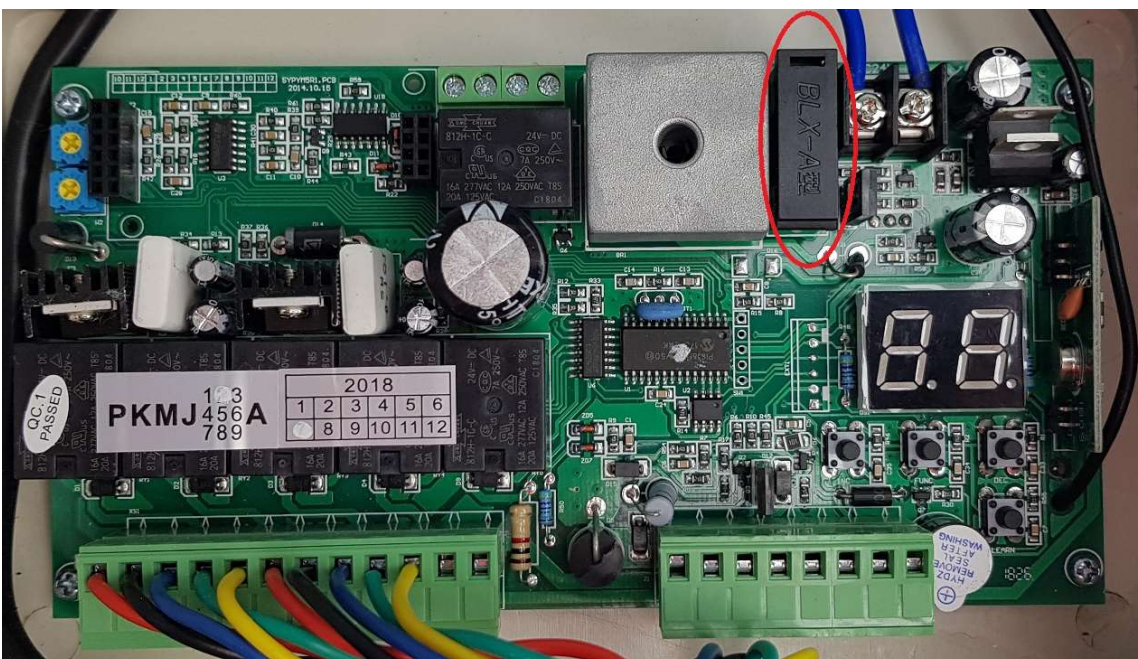

GTR062/078 – DC/Solar single & double swing gate kits

Fuse required – F10AL250V or F10L250V

